




Installation Instructions for All in One Pinball Solenoid Kit

1. Upon removing from box, remove the packing screws to free the solenoid bars from the main unit (not that the screws may be in different locations based on how it is packed)

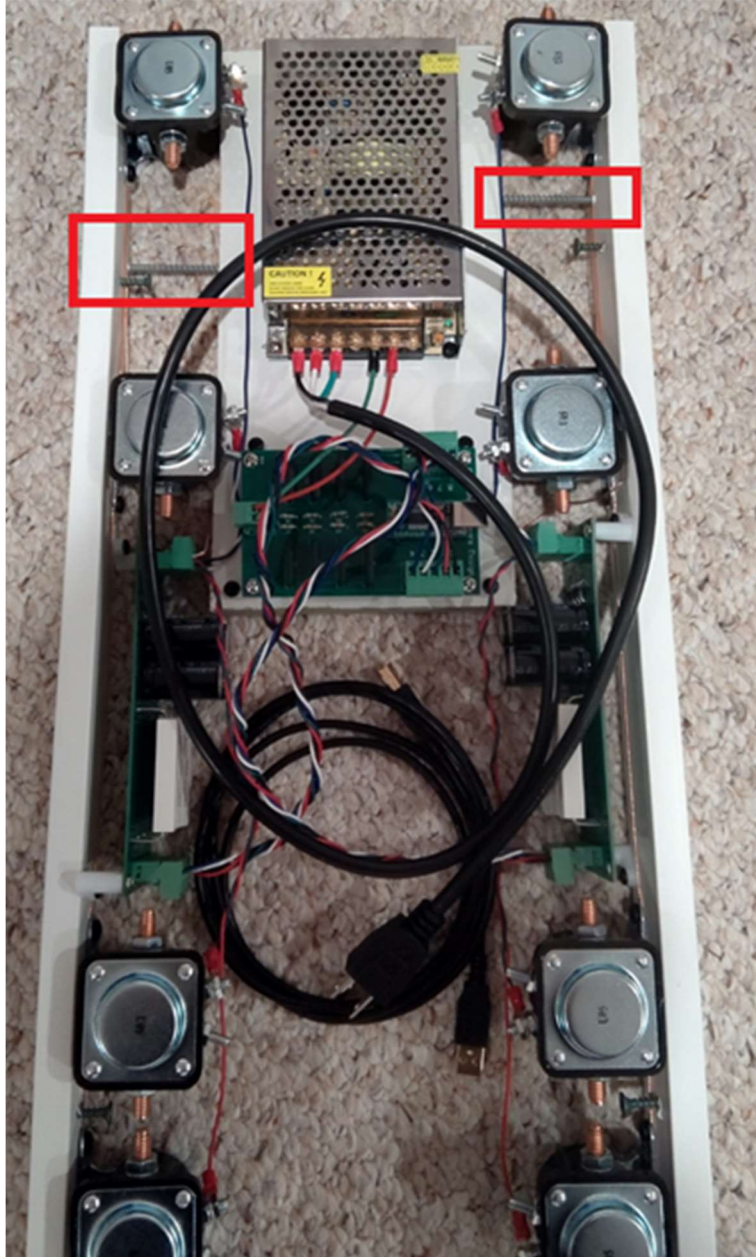

2. Unplug the wires from the main unit and install the solenoid bars into your pinball cabinet. There are four screws pre-set and ready to be used in a cabinet with $\frac{3}{4}$ " walls. Be careful to check that the screws will not protrude through the sides of your cabinet before screwing them in. The orientation and positioning of the solenoid bars relative to your cabinet can be seen in the picture below:

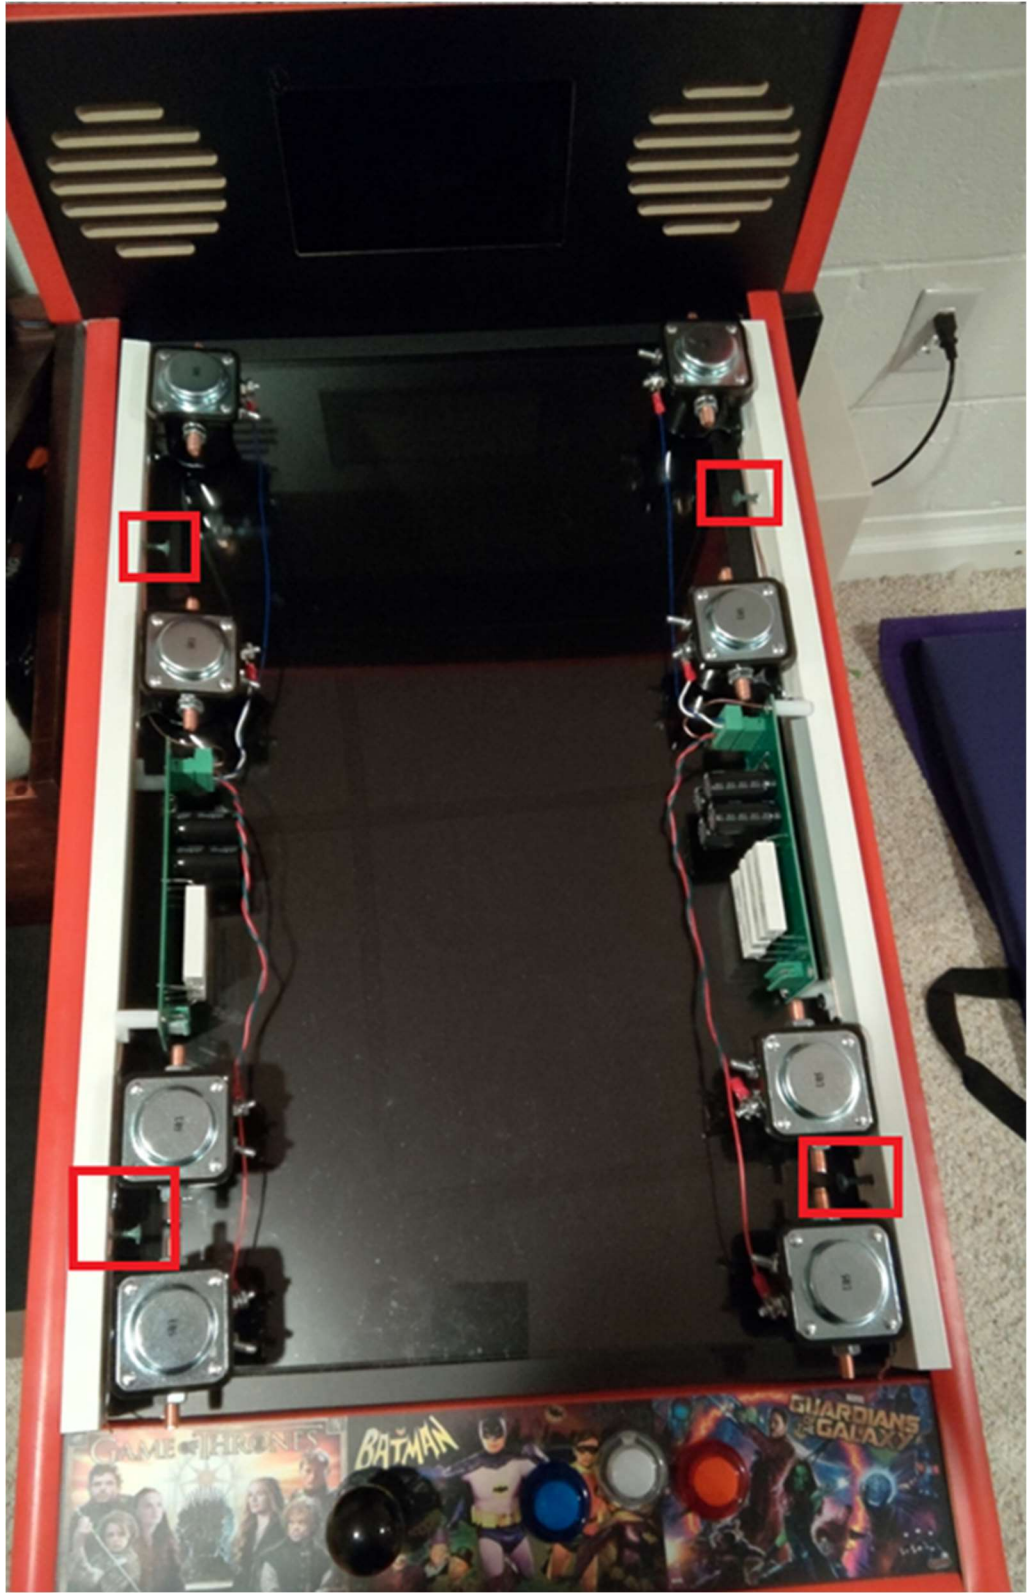

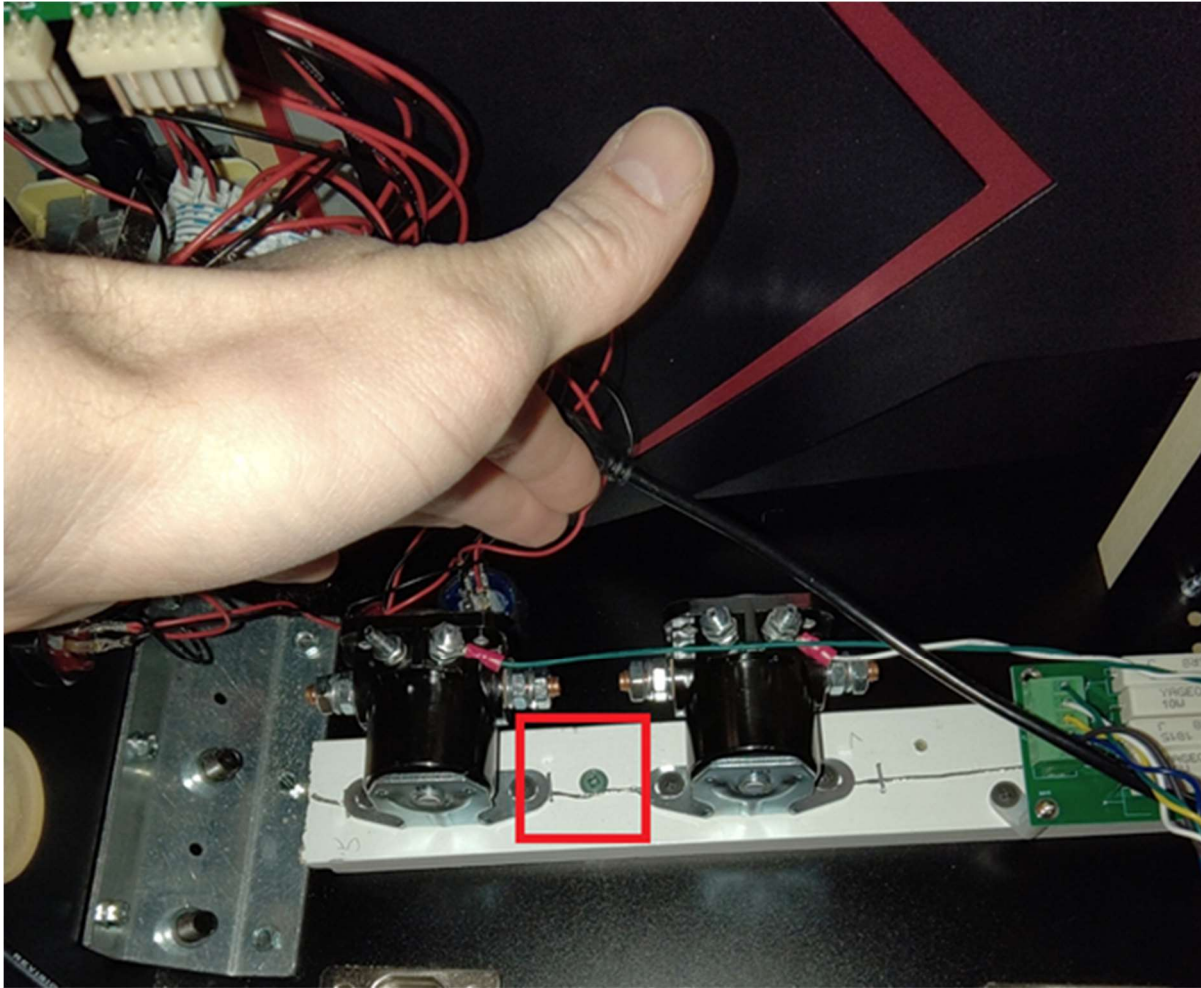

3. Plug the USB cable into your PC, the power cord into your outlet, and reconnect the main unit to the solenoid bars. Complete the software setup using the software setup instructions.